


Parts List

UHT Turbo Lapper

Item# 850-0928, 850-0930, 850-0932

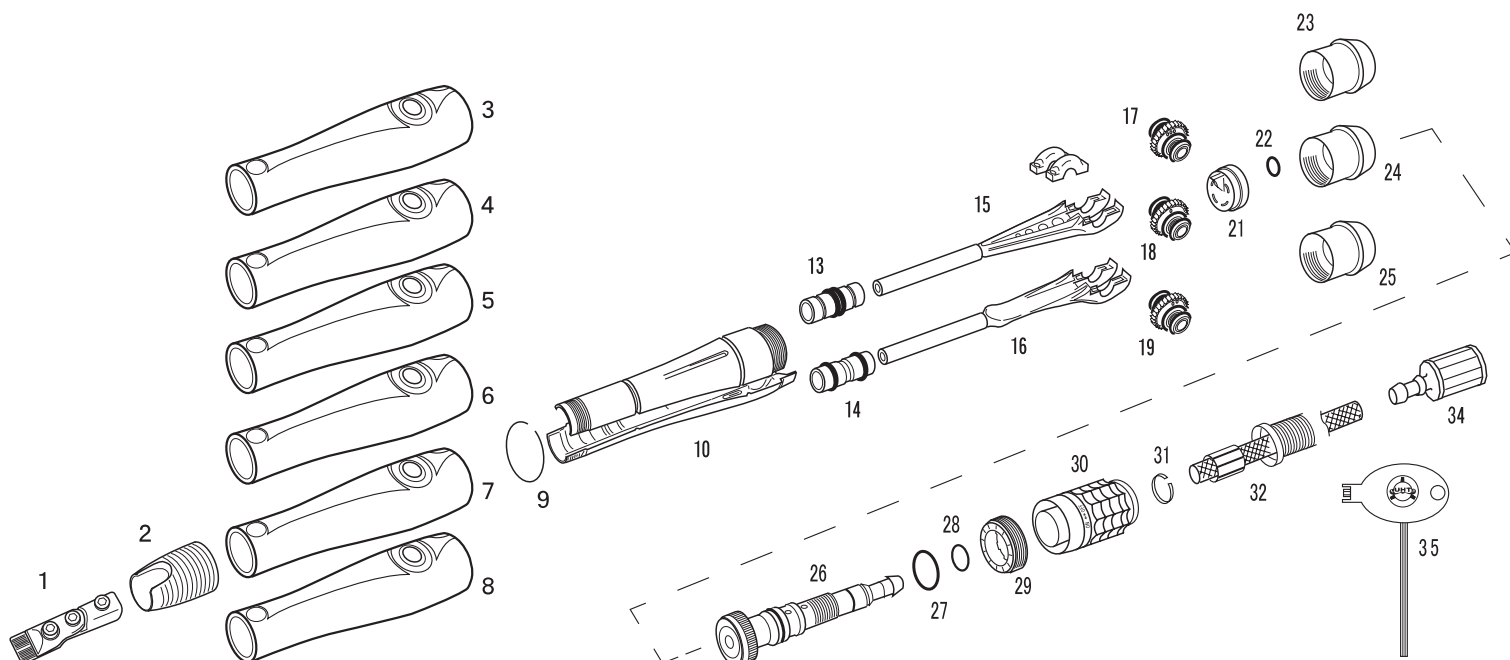

#	UHT CODE	DESCRIPTION
1	50257000	Super collet
	S0102649	Screw for super collet (φ5 x l8) (10 Pcs. a pack)
	S0102646	Screw for super collet (φ5 x l4) (10 Pcs. a pack)
	S0100131	Screw for super collet (φ3 x l10) (10 Pcs. a pack)
	50257030	Spring for super collet (10 Pcs. a pack)
	S0100119	Screw for old type collet (10 Pcs. a pack)
2	50251016	TI front cover
3	50292000	Rubber cover for TLL-03
4	50258000	Rubber cover for TLL-07
5	50302000	Rubber cover for TLL-12
6	50311000	Rubber cover for TLS-03
7	50271000	Rubber cover for TLS-07
8	50321000	Rubber cover for TLS-12
9	50251051	TL snap ring
10	50259000	TL casing A&B set
13	50303000	Bearing case assembly for linear
14	50272000	Bearing case assembly for swing
15	50273000	Connecting rod assembly for swing
16	50294000	Connecting rod assembly for linear
17	50295000	Turbine assembly for 03
18	50274000	Turbine assembly for 07
19	50304000	Turbine assembly for 12
	S0120105	O-ring for turbine assembly (P-7)
	S0122171	O-ring for turbine assembly (P-9) #S0122110

#	UHT CODE	DESCRIPTION
21	50252060	Nozzle
22	S0120503	S5 O-ring
23	50291010	End cap for 03 (blue)
24	50251043	End cap for 07 (red)
25	50301010	End cap for 12 (yellow)
26	50232012	Plastic valve
27	S0122107	O-ring (L)
28	S0122108	O-ring (S)
29	50232023	Lock nut
30	50236000	B-grip
31	50281051	Stop collar (EX#50232052)
32	50032170	Air hose 1.5M & band
	50030170	Hose band
	50032210	Air hose 150m
	50032200	Air hose 1m
33	50030311	Over hose
34	50032180	Hose joint (for Europe)
34	50032760	Hose joint(for USA)
35	50256011	Hexagonal wrench for TL
	20470000	Repair jig set
	S0125134	Ball bearing (outside) for turbine assembly
	S0125156	Ball bearing(inside) for turbine assembly
	50252106	Plunger for connecting rod
	50252076	Rod linear for connecting rod
	S0107417	Screw, BTP 2x10 for connecting rod
	S0107406	Screw, BTP 2x8 for connecting rod
	50252054	Rod cap for connecting rod